



LOUVOLITE

Hybrid Cassette Fitting instructions



Louvolite Customer Services

Tel: +1 905 374 0123 Fax: +1 905 374 0334 Email: sales@louvolitecanada.com

Installation of Hybrid Cassette


Your Cassette Blind will be supplied with either top fix or face brackets.

Top fixing

The Top fix spring brackets should be placed approx 2" (50mm) in from each end and any other brackets should be spaced evenly between them. (Top fix bracket code R3306)

Position your bracket from the centre of the fixing slot a minimum distance of 1.75" (45mm) from the back of any obstruction and with the lip to the back then mark the position of the hole and drill.

Fix all of the brackets.

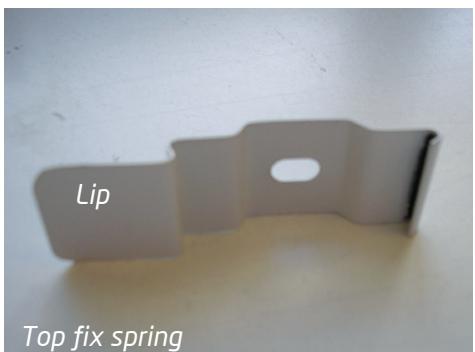

Fitting the blind

Fitting



Place the front lip of your cassette into the front hook of the bracket and push upwards into the bracket until there is a firm click.

Removing



To remove the blind, push the lip of the bracket at the back of the cassette upwards using the head of a screwdriver. This will free the back of the cassette. Carefully remove to avoid damage to the blind.

Top/Face Fixing

Top/face fixing universal brackets should be placed approx 2" (50mm) in from each end and any other brackets spaced evenly between them. Position the back of your bracket against the wall to the height of the drop then mark the position of the holes/slots (we recommend two holes) and drill the required holes.

Fix all of the brackets.

(Top/face fixing universal bracket code R3313)




*Top/face fixing
universal bracket*



Fitting the blind

Fitting

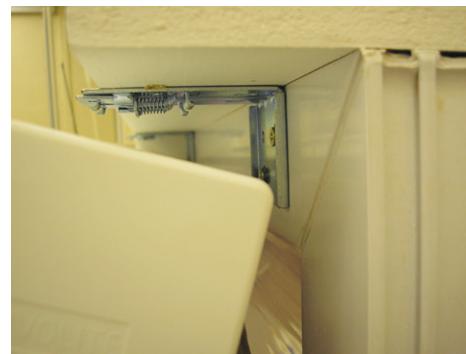

Tilt your cassette blind backwards and locate the front lip of the bracket to the front lip of the cassette and then push backwards and upwards at the same time until there is a firm click.

Removing



To remove the blind push back on the cassette and pull downwards.

Notes

Notes

Roller Blinds - Child Safety

Easybreak® Connector

For the installer

Join operating chain by last ball of each end into the larger holes on each side of the 2 connectors.


Two Easybreak® connectors should be fitted within the chain loop 200mm apart. This way one Easybreak® connector is always in the vertical position to perform as required. When blind is raised a connector should be at top of the blind on the chain length nearest the window.

Always attach a Safety Warning Tag

For the consumer

If any reasonable weight is placed within the loop, at least one of the Easybreak® connectors will break apart*. To re-connect, check connectors are not damaged, then

insert the end of the ball chain into larger hole in each connector. Push home leaving the chain in the same position as before. A connector should be at the top of the blind, on the side of the chain nearest to the window when blind is raised.

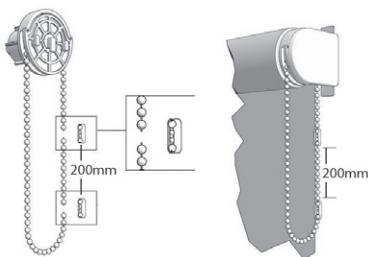


*Genuine Louvolite No.10 Chain and Easybreak® connector must be used.

Universal Cord Tensioner, for inside or outside mount installations.

For the installer: Please follow installation instructions upon purchase.
Always attach a safety warning tag.

For the consumer: Always ensure that the chain remains housed within the cord tensioner.

Universal Cord Tensioner complies with ANSI/WCMA A1001-2012

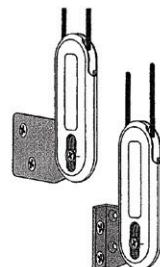

WARNING

Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings. They can also wrap cords around their necks. To avoid strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.

"Complete elimination of the strangulation risk can only be achieved by keeping cords, chains, and tapes and similar out of the reach of children. Use of additional safety devices may reduce the risk of strangulation but cannot be considered foolproof... Persons in charge of children are ultimately responsible for following the safety instructions provided by the manufacturer." EN 13120



**make it
safe**



Scan this with your smartphone to view Louvolite training videos